

• THANK YOU FOR USING •

We have purpose to provide a better life inspired by clean, hygenic and healthly lifestyles. We created design of every products with creativity but contain with comfortable and balance as a way of living. And we gladly say Thank You for believing us.

• CARE AND CLEANING •

The products is designed of years of trouble free performance.

By cleaning it periodically with mild soap, rinse thoroughly with warm water, and dry with a clean, soft cloth. It make your products keep looking new.

To avoid dull the finish, do not use abrasive cleaners, steel wool or harsh chemicals. Failure to follow these intructions may void your warrant.

CAUTION •

For safe operation of the product, please observe the following:

- * Avoid too much force for operation.
- * Keep the hand hold shower on the shower arm.
- * The recommended water pressure is over 2kg²/cm².
- * Do not dismantle the products without manual.
- TOOLS YOU WILL NEED •






• BEFORE YOU START INSTALLATION •

OBSERVE ALL LOCAL PLUMBING CODES

- * Make sure water supply is shut off.
- * Read these instructions carefully to ensure proper installation.
- * Our product reserves the right to update product design without notice.

* Check to make sure you have the following parts indicated below.





Shower Head











ator

1x

7T RETANGULAR HEAD

CODE	Ball joint type	RE220.001.CR	RE300.001.CR
	Without Ball joint type	RE220.002.CR	RE300.002.CR
***************************************	SIZE	220 x 340 mm	300 x 450 mm
FINISH		Chrome Plating	
ORIGIN		JoeyforLife / South Korea	



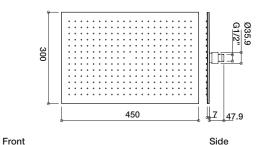

RE300.001.CR

RE220.001.CR

(02)

(оз


DIMENSION

INSTALLATION GUIDE BOOK

L/min


Water Pressure	220	300
1 Bar	13.2	16.5
2 Bar	19.2	22.2
3 Bar	23.8	26

*Direct Connection Without Tap

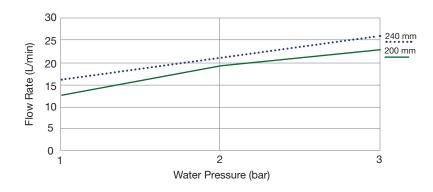


INSTALLATION

INSTALLATION PROCEDURE

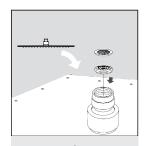

1.
Insert the flow rate regulator and washer on the ball joint valve.

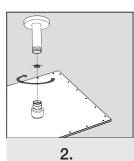

Connect the shower head tightly.



3. Fix the shower head with bolt.